

## Operating instructions Room actuator 230 V



## Table of contents

1	Safety instructions	2
2	Device layout	2
3	Function	2
3.1	System Information	2
3.2	Designated use	3
4	Operation	4
4.1	Controls	4
4.2	Status indication	4
4.3	Modes of operation	4
4.4	Blind/shutter control priorities	5
5	Fitting and electrical connection	7
5.1	Installing the device	7
5.2	Connecting the device	8
5.3	Connecting switched loads	8
5.4	Connecting blind/shutter drives	8
5.5	Connecting 230 V valve drives	9
5.6	Attaching the bus terminal cap	9
6	Start-up	10
6.1	Measuring the blind/shutter and slat running times	10
6.2	Loading the physical address and the application software	10
7	Technical data	10
8	Help in case of trouble	12
9	Accessories	12
10	Guarantee	13

## 1 Safety instructions

Electrical equipment must be installed and fitted by qualified electricians only. Observe the current accident prevention regulations. Failure to observe the instructions may cause damage to the device and result in fire or other hazards.

The device is not suited for safe disconnection of the mains supply. Do not connect consumers for SELV / PELV voltages..

Connect only electro-thermal valve drives to the heating outputs. Do not connect inductive or capacitive loads.

Do not operate electro-thermal valve drives with DC voltage. Do not connect three-phase AC motors.

These operating instructions are part of the product and must be left with the final customer.

## 2 Device layout

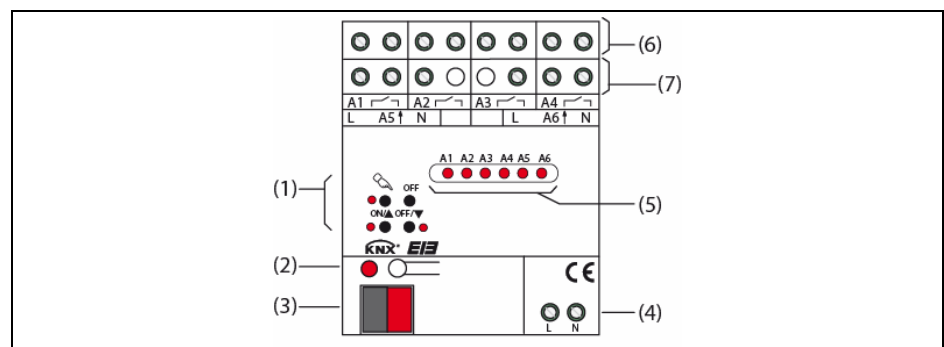


Fig.1: Device layout of room actuator 230 V

- (1) keypad for manual control
- (2) programming button and LED
- (3) KNX connection
- (4) mains supply connection
- (5) output status LEDs
- (6) connecting terminals for consumers / blinds/shutters
- (7) connecting terminals for 230 V valve drives

## 3 Function

### 3.1 System Information

This device is a product of the KNX system and complies with KNX directives. Detailed technical knowledge obtained in KNX training courses is a prerequisite to proper understanding.

The functionality of this device depends on the software.

Detailed information on loadable software and attainable functionality as well as the software itself can be obtained from the manufacturer's product database.

Planning, installation and commissioning of the unit is effected by means of KNX-certified software. The full functionality is available with KNX

commissioning software from version ETS3.0d onwards.

The product database, technical descriptions, conversion programs and other utilities are available in their latest version on our Internet page.

### 3.2 Designated use

- Switching of electrical consumers AC 230 V with potential-free contacts
- Switching of electrically operated blinds, shutters, awnings and similar curtains
- Heating outputs: electronic outputs for switching electro-thermal valve drives
- - Installation on DIN rails in small distribution boards

#### Product features

- Manual output control, provisional operation
- Feedback in manual control mode and in bus operation
- Scene function
- Disabling of individual outputs by hand or via the bus

#### Switching function

- Make-contact and break-contact operation
- Logic operation and forcing function
- Feedback function
- Central switching function with group feedback
- Time functions: ON-delay, OFF-delay, staircase lighting timer with early-warning function

#### Blind/shutter function

- Suitable for AC motors 230 V
- Direct control of blind/shutter position
- Direct control of slat position
- Checkback of running state, blind/shutter position and slat position
- Forced-control position from primary control
- Safety function: 3 independent wind alarms, rain alarm, frost alarm
- Sun protection function

#### Control of valve drives

- Switching or PWM operation
- Control of valve drives with working characteristics „normally open“ or „normally closed“
- Overload and short-circuit protection
- Emergency operation in the event of bus failure for summer and winter
- Protection against jamming valves
- Forced-control position
- Cyclical monitoring of input signals parametrizable

① PWM operation: Electro-thermal valve drives only have an „open“ and a „closed“ position. In PWM operation, these devices have quasi-continuous characteristics due to fast switching within the cycle time.

## 4 Operation

### 4.1 Controls

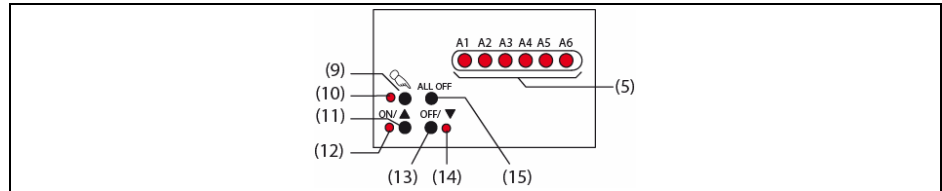


Fig.2: Controls – layout

- (5) output status LEDs
- (9) key : Manual control
- (10) LED : permanent manual control indicator
- (11) key **ON/▲**: switching on or opening a valve or raising a curtain / stop
- (12) LED **ON/▲**: lit up: switched on or blind/shutter moving upwards, manual control mode
- (13) key **OFF/▼**: switching off or closing a valve or lowering the blind/shutter / stop
- (14) LED **OFF/▼**: lit up: switched off or blind/shutter moving down, manual control mode
- (15) **ALL OFF key**: all outputs off, closing all valves and stopping all drives

### 4.2 Status indication

The status LEDs **A1...A6** (Fig. 2, 5) indicate the output states.

- Off: output is off
- On: output is on
- Flashing slowly: output in manual control mode
- Flashing fast: output disabled by permanent manual control mode

Heating outputs **A5** and **A6**: The LED does not indicate the characteristics of the valve drive, but the state of the output. **ON** = supplying current; **OFF** = not supplying current.

In the PWM mode of operation, the LED indication cannot be interpreted as representing the state of the valve drives connected and of the valves controlled

### 4.3 Modes of operation

- Bus operation: operation via touch sensors or other bus devices
  - Temporary manual control: manual operation locally with keypad, automatic return to bus operation
  - Permanent manual control mode: only manual operation locally on device
- ① Bus operation in manual control mode disabled.
  - ① Manual operation in the event of bus failure enabled.
  - ① After failure and return of bus voltage, the device switches over to bus operation.



- ① After failure and return of mains voltage, the device switches over to bus operation.
- ① Manual control mode can be disabled in operation via bus telegram.

#### 4.4 Blind/shutter control priorities

- Highest priority: manual control
- 2nd priority: forced-control position
- 3rd priority: safety function
- 4th priority: sun protection
- Lowest priority: bus operation: raising / lowering, slat adjustment, scenes, positioning


##### Activating the temporary manual control mode

Keypad operation must have been programmed beforehand and not be disabled.

- Press the  key briefly, < 1 s, LED **A1** flashing, LED  remains off.
- ① After 5 s without key-press, the actuator returns automatically to the bus mode.

##### Deactivating the temporary manual control mode

The device must be in the temporary manual control mode.

- No key-press for 5 s.
- or -
- Press the  key briefly, < 1 s, several times until the desired output status.

LEDs **A1...A6** are no longer flashing, but indicating the output status.



Switching outputs: Depending on programming, the output relays switch over to the position active at the time of deactivation of the manual control mode, e.g. to forcing and logic operation.

Shutter outputs: Depending on programming, the blinds/shutters move to the position active at the time of deactivation of the manual control mode, e.g. forced-control position, safety or sun protection position.

Heating outputs: Depending on programming, the outputs switch over to the position active at the time of deactivation of the manual control mode, e.g. to forcing and logic operation.



##### Activating the permanent manual control mode

Keypad operation must have been programmed beforehand and not be disabled.

- Press the  key for at least 5 s.  
LED  is on, LEDs **A1** is flashing, the permanent manual control mode is activated.

##### Deactivating the permanent manual control mode.

The device is in the permanent manual control mode.

- Press the  key for at least 5 s.  
The  LED is off, bus operation is activated.  
Switching outputs: Depending on programming, the output relays switch


over to the position active at the time of deactivation of the manual control mode, e.g. to forcing or logic operation.

Shutter outputs: Depending on programming, the blinds/shutters move to the position active at the time of deactivation of the manual control mode, e.g. forced-control, safety or sun protection position. Zwangsstellung, Sicherheits-, Sonnenschutzposition.

Heating outputs: Depending on programming, the outputs switch over to the position active at the time of deactivation of the manual control mode, e.g. to forcing or logic operation.

### Operating the outputs

The device must be in the permanent or temporary manual control mode.

- Press the  key briefly, < 1 s, several times until the desired output is selected.

The LED of the selected output **A1...A6** flashes.

The **ON/▲** and **OFF/▼** LEDs indicate the status.

- Operate the output with the **ON/▲** or **OFF/▼** key.

Switching outputs: switching on or off.

Shutter outputs:

Brief press: blind/shutter stop

Long press: raising/lowering the blind/shutter

Heating outputs: opening or closing the valve

The selected output executes the respective commands.

The **ON/▲** and **OFF/▼** LEDs indicate the status.

- ① Heating outputs with PWM: After switching on with **ON/▲**, the output is regulated to the programmed fixed value. The LEDs only indicate the state of the output, but not the state of the heating function.
- ① Temporary manual control: After all outputs have been selected one after another, the device quits the manual control mode with the next brief press.

### Switching off all outputs


The device is in the permanent manual control mode.

Press the ALL OFF key.

All outputs will be switched off. All blinds/shutters will be stopped. All heating valves will be closed.

### Disabling individual outputs

The device is in the permanent manual control mode.

- Press the  key briefly, < 1 s, several times until the desired output is selected.

The LED of the selected output A1...A6 flashes.

- Press the keys **ON/▲** and **OFF/▼** simultaneously for at least 5 s. The selected output is disabled.

All status LEDs of the selected output A1...A6 are flashing fast.

- Activate the bus mode (deactivate the permanent manual control mode).

① A disabled output can be operated in the manual control mode.


① If a disabled output is selected in the manual control mode, the LEDs are

---

flashing twice briefly at intervals.

### Re-enabling the outputs

The device must be in the permanent manual control mode.

- Press the  key briefly, < 1 s several times until the desired output is selected.

The status LEDs of the selected outputs **A1...A6** flash twice briefly at intervals.

- Press the keys **ON / ▲** and **OFF / ▼** simultaneously for at least 5 s.

The selected output **A1...A6** is enabled.

The LED of the selected output **A1...A6** is flashing slowly.

- Activate the bus mode (deactivate the permanent manual control mode).

## Information for qualified electricians



---

### ⚠ Danger!

**Electric shock in case of accidental contact with live parts. Electric shocks can be fatal. Before working on the device, cut out the mains supply and cover up live parts in the surroundings.**

---

## 5 Fitting and electrical connection

### 5.1 Installing the device

- Snap the device onto a mounting rail as per EN 60715. The connecting terminals must be at the top.

① The device warms up in operation. Observe the max. operating temperature. Ensure sufficient cooling.

## 5.2 Connecting the device

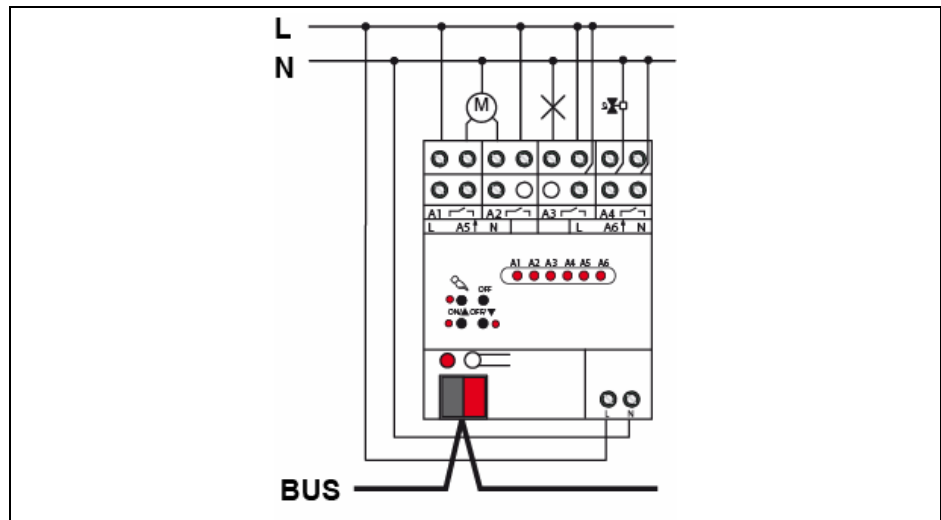


Fig.3: Connection

- Connect the bus line to the bus terminal.
  - Connect the mains voltage supply.
  - Connect the loads as described in the following chapters.
- ① Delivery state: provisional operation possible, output control via keypad enabled, All outputs are configured as shutter outputs.

## 5.3 Connecting switched loads

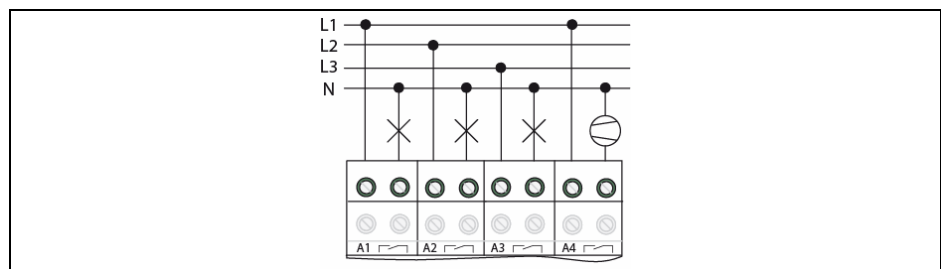


Fig. 4: Connection of switched loads

The output must be parameterized as switching output.

- Connect the switched loads (Fig. 4). Do not exceed the permissible load ratings (Technical data).

## 5.4 Connecting blind/shutter drives

For blind/shutter operation, two adjacent relay outputs are used as a blind/shutter output. The left relay output A1, A3 is intended for the upward direction and the right relay output A2, A4 for the downward direction.



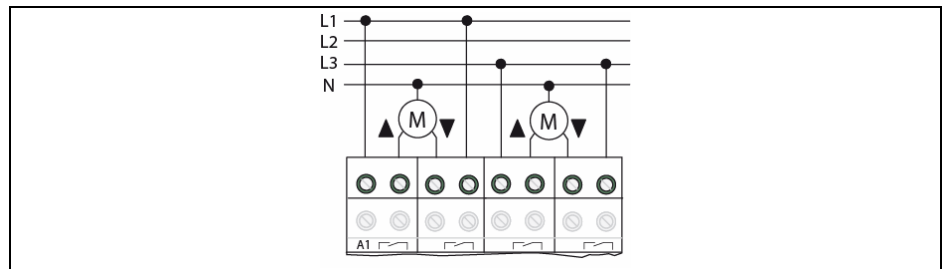


Fig. 5: Connection of blind/shutter motors

Observe the permissible load ratings (Technical data).

The output must have been parameterized as switching output.



**Caution!**

**Risk of irreparable damage if several drives are connected in parallel to one output.**

**Limit switch contacts can weld together and drives, blinds/shutters and the shutter actuator can be irreparably damaged. Use an isolating relay.**

- Connect the drives (Fig 5).

## 5.5 Connecting 230 V valve drives

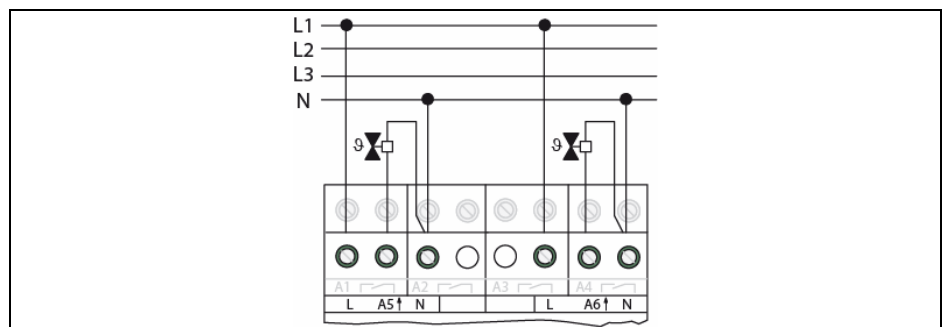


Fig. 6: Connection of electro-thermal 230 V valve drives

- Connect the valve drives (Fig. 6). Connect 4 valve drives maximum to one output.
- ① Connect only electro-thermal valve drives.
- ① In the case of electro-thermal valve drives, attention must be paid to the working characteristics normally open or normally closed (see project design data).

## 5.6 Attaching the bus terminal cap

Connecting terminal for bus line to insert

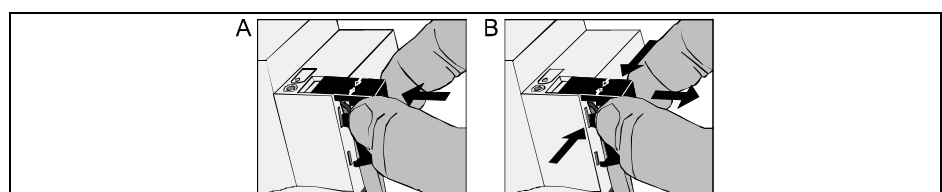


Fig. 7: Protective cap

To protect the bus line against dangerous voltages at the connecting terminal, slide on the protective cap.

- Lead bus lines towards the rear of the device.
- Snap the cap onto the bus terminal (Fig. 7, A).

#### Removing the bus terminal cap

- Press the sides and pull out the cap (Fig. 7, B).

## 6 Start-up

### 6.1 Measuring the blind/shutter and slat running times

The blind/shutter running time is important for positioning and scene moves. With Venetian blinds, the slat adjusting time is - for technical reasons - part of the overall running time of blinds/shutters. The opening angle of the slats is therefore defined as the running time required between the 'open' and 'closed' positions.

The upward move is generally longer than the downward move and is accounted for as running time prolongation in percent.

- Measure the UP and DOWN running times of the blind/shutter.
- Measure the slat adjusting time.
- Enter the measured values into the parameter settings list.

### 6.2 Loading the physical address and the application software

- Switch on the bus voltage.
- Assign a physical address and download the application software (with commissioning software).
- Switch on the mains voltage at the outputs.

## Appendix

## 7 Technical data

KNX-medium	TP1
Commissioning mode	S-mode
KNX supply	21...32 V DC
KNX power consumption	max. 150 mW
Rated voltage	AC 230 / 240 V~
Mains frequency	50/60 Hz
Heat dissipation	max. 6 W
Ambient temperature	-5 °C...+45 °C
Storage temperature	-25 °C...+70 °C
Fitting width	72 mm (4 TE)
Weight	approx. 290 g
<b>Connection</b>	
KNX	connecting terminal
230 V supply and outputs	screw terminals

Connecting cross-section	
Single-wire	0.5...4 mm <sup>2</sup>
stranded wire without ferrule	0.35...4 mm <sup>2</sup>
stranded wire with ferrule	0.14...2.5 mm <sup>2</sup>
Heating outputs	
Contact type	semiconductor, ε
Switching voltage	AC 230/240 V
Switching current	5 mA ... 50 mA
Inrush current	max. 1.5 A, 2 s
Number of drives per output	max. 4
<b>Relay outputs</b>	
Contact type	potential-free n.o. contact (μ-contact)
Switching voltage	AC 230/240 V
Switching capacity AC1 (cos φ > 0.8)	16 A
Switching capacity AC3 (cos φ < 0.8)	6 A
Switching capacity AX (fluorescent lamps)	16 AX
Max. inrush current 200 μs	800 A
Max. inrush current 20 ms	165 A
<b>Load rating of relay outputs</b>	
Resistive load	3000 W
Capacitive load: (max. 140 μF)	16 A
Motors	1380 VA
Lamp loads	
Incandescent lamps:	3000 W
230 V halogen lamps	2500 W
TRONIC transformers	1500 W
Inductive transformers:	1200 VA
Fluorescent lamps	
non-compensated	1000 W
parallel compensated (max. 140 μF)	1160 W
lead-lag circuit (max. 140 μF)	2300 W
Compact fluorescent lamps	
non-compensated	1000 W
parallel compensated (max. 140 μF)	1160 W
Mercury vapour lamps	
non-compensated	1000 W
parallel compensated (max. 140 μF)	
Electronic Ballasts	see product documentation

**Technical specifications subject to change.**

## 8 Help in case of trouble

### Manual control with keypad not possible

Manual operation not parameterized.

Parameterize manual operation.

Manual operation disabled via the bus.

Enable the manual control mode.

No mains voltage.

Switch on the mains voltage.

Check the fuses.

### Output control not possible

Output disabled.

Cancel the state of disabling.

### None of the outputs operational

All outputs are disabled.

Cancel the state of disabling.

Permanent manual control mode active.

Deactivate the permanent manual control mode (switch this mode off).

Application software stopped, programming LED flashes.

Make a reset: Disconnect the device from the bus,  
reconnect after ca. 5 s.

### Operation via the bus impossible

No bus voltage.

Switch on the bus voltage; have the installation  
checked by a qualified electrician.

Application software stopped, programming LED flashes.

Make a reset: Disconnect the device from  
the bus, reconnect after ca. 5 s..

## 9 Accessories

Protective cap

Ref.-no.: 2050 K

Isolating relay AP

Ref.-no.: TR-S

Isolating relay UP

Ref.-no.: TR-S REG

Isolating relay UP

Ref.-no.: TR-S UP

Thermal valve drive 230 V

Ref.-no.: TVA 110 WW

## 10 Guarantee

Our products are under guarantee within the scope of the statutory provisions.

**Please return the unit postage paid to our central service department giving a brief description of the fault:**

ALBRECHT JUNG GMBH & CO. KG  
Service Center  
Kupferstr. 17-19  
D-44532 Lünen  
Service-Line: +49 (0) 23 55 . 80 65 51  
Telefax: +49 (0) 23 55 . 80 61 89  
[mail.vki@jung.de](mailto:mail.vki@jung.de)

### **General equipment**

Service-Line: +49 (0) 23 55 . 80 65 55  
Telefax: +49 (0) 23 55 . 80 62 55  
[mail.vkm@jung.de](mailto:mail.vkm@jung.de)

### **KNX equipment**

Service-Line: +49 (0) 23 55 . 80 65 56  
Telefax: +49 (0) 23 55 . 80 62 55  
[mail.vkm@jung.de](mailto:mail.vkm@jung.de)



The CE-Sign is a free trade sign addressed exclusively to the authorities and does not include any warranty of any properties